

"NO BOLTS" WOOD BEDS -

- You can install **MAR-K™** bed wood with the large bed-to-frame bolts hidden under the wood. This gives a smooth, clean look to the bed floor, especially when used with **MAR-K™** "hidden bolt" bed strips.
- Our bed strips with hidden fasteners were developed by **MAR-K™** to give your bed a smooth custom look. The bed strips have special bolts which slide in the groove on the underside of the strip to adjust to any hole location.
- The bottom surface of the wood is drilled with a recessed clearance around the bolt head.  The wood is grooved on the sides for the bed strips just like the original wood.
- The boards and strips rest on the cross sills as original, completely hiding the bed-to-frame and bed strip bolts.
- No welding is needed for installation of a "no bolts" bed. The bed-to-frame bolts go through square mounting holes in the cross sills and the bolt head is under the bed wood as shown below.
- No bolts wood beds are made in Oklahoma City, USA.

"NO BOLTS" BED WOOD/STRIPS



Polished stainless material is put in a roll former to make the bed strips with hidden fasteners.

CUSTOM BEDS: **MAR-K™** can make hidden bolts bed strips to fit almost any truck. Aluminum bed strips are available in custom lengths of up to 97" long. Hidden fasteners are included. Polished Stainless, Unpolished Stainless and Steel hidden bolts bed strips are available in nearly any custom length and also include the fasteners. Call our sales staff to order.

Tech Tip: Cross Sills and No Bolts Wood -

MAR-K's™ "nobolts" system may require modification to your existing cross sills. If you are ordering **MAR-K™** cross sills with your bed wood, the cross sill holes punched are square to accommodate the square shoulder of the bed-to-frame carriage bolt. If you are using stock cross sills, the holes will be round. Use a file to make the holes slightly larger and more square to fit the bolt.

HIDDEN FASTENERS:

These special bolts slide into the groove on the underside of the bed strips to adjust to any bolt location. Includes nut and washers. Bed strips with hidden fasteners include all fasteners needed to replace the original bolts. Order this fastener only if you need extras or for custom applications. Available in 1-1/4" length for most bed strips and 2" for special applications. Please specify what size fasteners you need when you order your strips.



No Bolts Bed Wood: The bottom surface of the wood is drilled with a recessed clearance around the bolt head. The boards and strips rest on the cross sills as original, completely hiding the bed-to-frame and bed strip bolts.

- Bed Strip Fasteners**
- 100518 T-Bolt FASTENERS 1-1/4"\$3.00
 - 100519 T-Bolt FASTENERS 2"4.50

MAR-K's™ oak bed wood is show quality and pine bed wood is recommended for daily driver use. For more detailed information on oak and pine bed wood, please see the bed wood section, page 14.



"NO BOLTS" BED
FOR CHEVY/GMC

Oak Bed Wood with Hidden Mounting Holes

Pine Bed Wood with Hidden Mounting Holes

GM

Short Stepside\$448 set

100631HM	34-36 SHORT CHEVY
110160HM	37-38 SHORT CHEVY
110792HM	39 SHORT CHEVY
110162HM	40-45 SHORT CHEVY
110164HM	46 SHORT CHEVY
110166HM	47-51 SHORT
110168HM	51-53 SHORT
110170HM	54-55 1st SHORT
110172HM	55-2nd-59 SHORT
110174HM	60-62 SHORT
110176HM	63-66 SHORT
110178HM	67-72 SHORT
110180HM	73-87 SHORT

Long Stepside\$490 set

100635HM	36 LONG GMC 1/2 Ton
100639HM	37-38 LONG GMC 1/2 Ton
110182HM	40-45 LONG CHEVY
110052HM	46 LONG CHEVY
110184HM	47-51 LONG 1/2 Ton GMC
110186HM	47-51 LONG 3/4 Ton
110330HM	51-53 LONG 1/2 Ton GMC
110332HM	51-53 LONG 3/4 Ton
110188HM	54-55 1st 1/2 Ton GMC
100743HM	54-55 1st LONG 3/4 Ton
100741HM	55-2nd-57 LONG STEP 89"
110194HM	57-59 LONG STEP 97"
110198HM	60-62 LONG STEP
110200HM	63-66 LONG STEP
110202HM	67-72 LONG STEP
110204HM	73-87 LONG - 14 1/8"
110204HM-A	73-87 LONG - 28 1/16"

2nd mtg hole at 14 1/8" or 28 1/16"

GM

Short Stepside\$380 set

100633HM	34-36 SHORT CHEVY
110161HM	37-38 SHORT CHEVY
110793HM	39 SHORT CHEVY
110163HM	40-45 SHORT CHEVY
110165HM	46 SHORT CHEVY
110167HM	47-51 SHORT
110169HM	51-53 SHORT
110171HM	54-55 1st SHORT
110173HM	55-2nd-59 SHORT
110175HM	60-62 SHORT
110177HM	63-66 SHORT
110179HM	67-72 SHORT
110181HM	73-87 SHORT

Long Stepside\$401 set

100637HM	36 LONG GMC 1/2 Ton
100681HM	37-38 LONG GMC 1/2 Ton
110183HM	40-45 LONG CHEVY
110053HM	46 LONG CHEVY
110185HM	47-51 LONG 1/2 Ton GMC
110187HM	47-51 LONG 3/4 Ton
110331HM	51-53 LONG 1/2 Ton GMC
110333HM	51-53 LONG 3/4 Ton
110189HM	54-55 1st 1/2 Ton GMC
100744HM	54-55 1st LONG 3/4 Ton
100742HM	55-2nd-57 LONG 89"
110195HM	57-59 LONG 97"
110199HM	60-62 LONG
110201HM	63-66 LONG
110203HM	67-72 LONG
110205HM	73-87 LONG - 14 1/8"
110205HM-A	73-87 LONG - 28 1/16"

2nd mtg hole at 14 1/8" or 28 1/16"

Short Fleetside\$543 set

110206HM	58-59 SHORT
110208HM	60-62 SHORT
110210HM	63-66 SHORT
110212HM	67-72 SHORT

Long Fleetside\$629 set

110214HM	58-59 LONG
110216HM	60-62 LONG
110218HM	63-66 LONG
110220HM	67-72 LONG
110226HM	73-80 LONG - 11 1/2"
110226HM-A	73-80 LONG - 25 3/8"

2nd mtg hole at 11 1/2" or 25 3/8"


Short Fleetside\$451 set

110207HM	58-59 SHORT
110209HM	60-62 SHORT
110211HM	63-66 SHORT
110213HM	67-72 SHORT

Long Fleetside\$466 set

110215HM	58-59 LONG
110217HM	60-62 LONG
110219HM	63-66 LONG
110221HM	67-72 LONG
110227HM	73-80 LONG - 11 1/2"
110227HM-A	73-80 LONG - 25 3/8"

2nd mtg hole at 11 1/2" or 25 3/8"

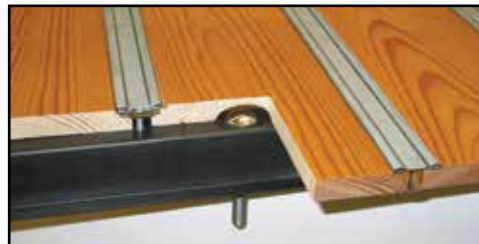

BED BOLT KITS FOR BED-TO-FRAME AND SIDES, SEE PAGE 36.



Polished Stainless Bed Strips with Fasteners

Unpolished Stainless Bed Strips with Fasteners

Steel Bed Strips with Fasteners

GM

- Short Stepside\$58.00 ea**
 102315HB 30-33 SHORT CHEVY
 100869HB 34-36 SHORT CHEVY
 110004HB 37-39 SHORT CHEVY
 110001HB 40-46 SHORT CHEVY
 110028HB 47-53 SHORT
 110016HB 54-59 SHORT
 110019HB 60-66 SHORT
 110022HB 67-72 SHORT
 110025HB 73-87 SHORT

- Long Stepside\$64.50 ea**
 100890HB 35-36 LONG GMC
 110031HB 37-38 LONG GMC
 110037HB 37-39 LONG CHEVY
 100875HB 40-46 LONG CHEVY
 100881HB 47-53 LONG
 110043HB 54-55 1ST LONG
 110046HB 55 2nd-57 LONG 89"
 110049HB 57-59 LONG 97"
 110055HB 60-66 LONG
 110064HB 67-72 LONG
 110067HB 73-87 LONG

- 1 Ton Stepside\$65.00 ea**
 110327HB 47-53 1 TON 107"
 102434HB 54-59 1 TON 107 1/4"

- Panel Truck/Canopy Express**
 102664HB 47-51 82"\$638.00 set
 110495HB 52-55 79.5"58.00 ea

- Short Fleetside Sets**
 110070HB 58-59 SHORT\$638.00
 110073HB 60-66 SHORT\$522.00
 110076HB 67-72 SHORT\$522.00

- Long Fleetside Sets**
 110082HB 58-59 LONG\$705.50
 110085HB 60-66 LONG\$577.50
 110091HB 67-72 LONG\$577.50
 110097HB 73-80 LONG\$385.00

- Longhorn Sets**
 110100HB 69-72.....\$577.50

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.



GM

- Short Stepside \$51.50 ea**
 102316HB 30-33 SHORT CHEVY
 100870HB 34-36 SHORT CHEVY
 110005HB 37-39 SHORT CHEVY
 110002HB 40-46 SHORT CHEVY
 110029HB 47-53 SHORT
 110017HB 54-59 SHORT
 110020HB 60-66 SHORT
 110023HB 67-72 SHORT
 110026HB 73-87 SHORT

- Long Stepside\$57.50 ea**
 100900HB 35-36 LONG GMC
 110032HB 37-38 LONG GMC
 110038HB 37-39 LONG CHEVY
 100876HB 40-46 LONG CHEVY
 100882HB 47-53 LONG
 110044HB 54-55 1ST LONG
 110047HB 55 2nd-57 LONG 89"
 110050HB 57-59 LONG 97"
 110059HB 60-66 LONG
 110065HB 67-72 LONG
 110068HB 73-87 LONG

- 1 Ton Stepside \$58.00 ea**
 110328HB 47-53 1 TON 107"
 102436HB 54-59 1 TON 107 1/4"

- Panel Truck/Canopy Express**
 102663HB 47-51 82"\$564.50 set
 110496HB 52-55 79.5" 51.50 ea

- Short Fleetside Sets**
 110071HB 58-59 SHORT\$564.00
 110074HB 60-66 SHORT\$462.00
 110077HB 67-72 SHORT\$462.00

- Long Fleetside Sets**
 110083HB 58-59 LONG\$632.00
 110086HB 60-66 LONG\$517.00
 110092HB 67-72 LONG\$517.00
 110098HB 73-80 LONG\$345.00

- Longhorn Sets**
 110101HB 69-72 LONGHORN ... \$517.00

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.



GM

- Short Stepside\$42.50 ea**
 102308HB 30-33 SHORT CHEVY
 100883HB 34-36 SHORT CHEVY
 110006HB 37-39 SHORT CHEVY
 110003HB 40-46 SHORT CHEVY
 110030HB 47-53 SHORT
 110018HB 54-59 SHORT
 110021HB 60-66 SHORT
 110024HB 67-72 SHORT
 110027HB 73-87 SHORT

- Long Stepside\$48.50 ea**
 100910HB 35-36 LONG GMC
 110033HB 37-38 LONG GMC
 110039HB 37-39 LONG CHEVY
 100877HB 40-46 LONG CHEVY
 100884HB 47-53 LONG
 110045HB 54-55 1ST LONG
 110048HB 55 2nd-57 LONG 89"
 110051HB 57-59 LONG 97"
 110060HB 60-66 LONG
 110066HB 67-72 LONG
 110069HB 73-87 LONG

- 1 Ton Stepside\$49.50 ea**
 110329HB 47-53 1 TON 107"
 110684HB 54-59 1 TON 107 1/4"

- Panel Truck/Canopy Express**
 102662HB 47-51 1/2 TON 82" \$466.50 set
 110497HB 52-55 1/2 TON 79.5" 42.50 ea

- Short Fleetside Sets**
 110072HB 58-59 SHORT\$466.50
 110075HB 60-66 SHORT\$381.50
 110078HB 67-72 SHORT\$381.50

- Long Fleetside Sets**
 110084HB 58-59 LONG\$534.00
 110087HB 60-66 LONG\$437.00
 110093HB 67-72 LONG\$437.00
 110099HB 73-80 LONG\$291.50

- Longhorn Sets**
 110102HB 69-72 LONGHORN .. \$438.00

CORRECT NUMBER OF BED STRIP BOLTS ARE INCLUDED FOR YOUR YEAR SERIES.



Steel must be painted to prevent rusting.

BED BOLT KITS FOR BED-TO-FRAME AND SIDES, SEE PAGE 36.



"NO BOLTS" BED
FOR FORD/DODGE

Oak Bed Wood with Hidden Mounting Holes

FORD

Short Flareside.....\$448 set
 102603HM 51-52 SHORT
 120384HM 53-60 SHORT
 120388HM 61-64 SHORT
 120394HM 65-72 SHORT

Short Flareside.....\$476 set
 120392HM 76-79 SHORT
 120386HM 80-87 SHORT

Long Flareside.....\$588 set
 102772HM 53-60 LONG
 102762HM 64-66 LONG 39"
 102762HM-A 64-66 LONG 40 1/8"
 2nd mtg hole at 39" or 40 1/8"
 102763HM 67-72 LONG

Long Flareside.....\$610 set
 102722HM 76-79 LONG
 Flareside is same as Stepside

DODGE

Short Stepside.....\$527 set
 130319HM 48-52 SHORT 78" x 49"
 100331HM 53-60 SHORT 76" x 49"

Long Stepside.....\$567 set
 100322HM 51-52 LONG 90" x 49"

Long Stepside.....\$610 set
 130328HM 48-52 LONG 90" x 54"
 102475HM 53-60 LONG 88" x 54"
 110484HM 65 2nd-71 LONG 94" x 54"

Power Wagon.....\$616 set
 102364HM 46-50 95 3/4" x 54"
 130301HM 51-52 95 3/4" x 54"
 130309HM 53-68 93 3/4" x 54"



Pine Bed Wood with Hidden Mounting Holes

FORD

Short Flareside.....\$404 set
 102605HM 51-52 SHORT
 120391HM 53-60 SHORT
 120397HM 61-64 SHORT
 120399HM 65-72 SHORT


Short Flareside.....\$423 set
 120385HM 76-79 SHORT
 120389HM 80-87 SHORT

Flareside is same as Stepside

DODGE

Short Stepside.....\$402 set
 130320HM 48-52 SHORT 78" x 49"
 100214HM 53-60 SHORT 76" x 49"

Long Stepside.....\$436 set
 100332HM 51-52 LONG 90" x 49"

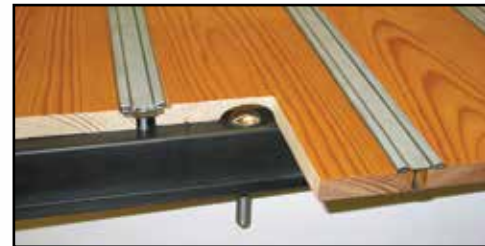

BED BOLT KITS FOR BED-TO-FRAME AND SIDES, SEE PAGE 36.



Polished Stainless Bed Strips with Fasteners

Unpolished Stainless Bed Strips with Fasteners

Steel Bed Strips with Fasteners

FORD

Short Flareside..... \$58.00 ea
120363HB 28-31 FORD MODEL A
120338HB 51-52 SHORT
120341HB 53-60 SHORT
120349HB 61-64 SHORT
120353HB 65-72 SHORT
120346HB 76-87 SHORT

Long Flareside..... \$64.50 ea
102544HB 53-60 LONG
105185HB 61-63 LONG
105184HB 64-66 LONG
102553HB 67-72 LONG
120542HB 73-79 LONG

**CORRECT NUMBER OF FASTENERS
ARE INCLUDED FOR YOUR YEAR SERIES.
Flareside is same as Stepside**

FORD

Short Flareside..... \$51.50 ea
120381HB 28-31 FORD MODEL A
120350HB 51-52 SHORT
120345HB 53-60 SHORT
120339HB 61-64 SHORT
120342HB 65-72 SHORT
120359HB 76-87 SHORT

Long Flareside..... \$57.50 ea
102545HB 53-60 LONG FLARE
105189HB 61-63 LONG FLARE
105183HB 64-66 LONG FLARE
102552HB 67-72 LONG FLARE
120541HB 73-79 LONG FLARE

**CORRECT NUMBER OF FASTENERS
ARE INCLUDED FOR YOUR YEAR SERIES.
Flareside is same as Stepside**

FORD

Short Flareside..... \$42.50 ea
120374HB 28-31 FORD MODEL A
120344HB 51-52 SHORT FLARE
120354HB 53-60 SHORT FLARE
120348HB 61-64 SHORT FLARE
120357HB 65-72 SHORT FLARE
120351HB 76-87 SHORT FLARE

Long Flareside..... \$48.50 ea
102546HB 53-60 LONG FLARE
105190HB 61-63 LONG FLARE
102372HB 64-66 LONG FLARE
102551HB 67-72 LONG FLARE
120540HB 73-79 LONG FLARE

**CORRECT NUMBER OF FASTENERS
ARE INCLUDED FOR YOUR YEAR SERIES.
Flareside is same as Stepside**

DODGE

Short Stepside \$58.00 ea
130274HB 39-47 SHORT 78"
100155HB 48-52 SHORT 78"
100177HB 53-54 SHORT 76"
130268HB 55-60 SHORT 76"
130306HB 61-65 1st SHORT 76"
100196HB 65-2nd-85 SHORT 76"

Long Stepside \$64.50 ea
130311HB 39-47 LONG 90"
100156HB 48-52 LONG 90"
100205HB 53-54 LONG 88"
102456HB 55-60 LONG 88"
130277HB 61-65 1st LONG 88"
100186HB 65-2nd-85 LONG 94"

Power Wagon \$64.50 ea
100221HB 46-52 95 3/4"
100170HB 53-68 93 3/4"

**CORRECT NUMBER OF FASTENERS
ARE INCLUDED FOR YOUR YEAR SERIES.**

DODGE

Short Stepside \$51.50 ea
130275HB 39-47 SHORT 78"
100185HB 48-52 SHORT 78"
100193HB 53-54 SHORT 76"
130269HB 55-60 SHORT 76"
130307HB 61-65 1st SHORT 76"
100161HB 65-2nd-85 SHORT 76"

Long Stepside \$57.50 ea
130312HB 39-47 LONG STEP 90"
100194HB 48-52 LONG STEP 90"
100162HB 53-54 LONG STEP 88"
102457HB 55-60 LONG STEP 88"
130278HB 61-65 1st LONG STEP 88"
100215HB 65-2nd-85 LONG STEP 94"

Power Wagon \$57.50 ea
100231HB 46-52 95 3/4"
100195HB 53-68 93 3/4"

**CORRECT NUMBER OF FASTENERS
ARE INCLUDED FOR YOUR YEAR SERIES.**

DODGE

Short Stepside \$42.50 ea
130276HB 39-47 SHORT 78"
100168HB 48-52 SHORT 78"
100183HB 53-54 SHORT 76"
130270HB 55-60 SHORT 76"
130308HB 61-65 1st SHORT 76"
100174HB 65-2nd-85 SHORT 76"

Long Stepside \$48.50 ea
130313HB 39-47 LONG STEP 90"
100167HB 48-52 LONG STEP 90"
100191HB 53-54 LONG STEP 88"
102458HB 55-60 LONG STEP 88"
130279HB 61-65 1st LONG STEP 88"
100208HB 65-2nd-85 LONG STEP 94"

Power Wagon \$48.50 ea
100219HB 46-52 95 3/4"
100175HB 53-68 93 3/4"

**CORRECT NUMBER OF FASTENERS
ARE INCLUDED FOR YOUR YEAR SERIES.**



Steel must be painted to prevent rusting.

BED BOLT KITS FOR BED-TO-FRAME AND SIDES, SEE PAGE 36.



Aluminum Bed Strips with Fasteners

GM

- Short Stepside\$43.00 ea
- 111001 30-33 SHORT CHEVY
- 111002 34-36 SHORT CHEVY
- 111004 37-39 SHORT CHEVY
- 111007 40-46 SHORT CHEVY
- 111011 47-53 SHORT
- 111016 54-59 SHORT
- 111022 60-66 SHORT
- 111028 67-72 SHORT
- 111032 73-87 SHORT

Long Stepside\$49.50 ea

- 111003 35-36 LONG GMC
- 111006 37-38 LONG GMC
- 111005 37-39 LONG CHEVY
- 111008 40-46 LONG CHEVY
- 111012 47-53 LONG
- 111017 54-55 1ST LONG
- 111018 55-2nd-57 LONG 89"
- 111019 57-59 LONG 97"
- 111024 60-66 LONG
- 111030 67-72 LONG
- 111033 73-87 LONG

Short Fleetside Sets

- 111020 58-59 SHORT ...\$472.50
- 111023 60-66 SHORT386.50
- 111029 67-72 SHORT386.50

Long Fleetside Sets

- 111021 58-59 LONG\$540.00
- 111025 60-66 LONG442.00
- 111031 67-72 LONG442.00
- 111034 73-80 LONG294.50

CORRECT NUMBER OF FASTENERS ARE INCLUDED FOR YOUR YEAR SERIES.



Aluminum Bed Strips with Fasteners

FORD

- Short Flareside.....\$43.00 ea
- 111049 51-52 SHORT
- 111051 53-60 SHORT
- 111053 61-64 SHORT
- 111056 65-72 SHORT
- 111058 76-87 SHORT

Long Flareside.....\$49.50 ea

- 111052 53-60 LONG
- 111054 61-63 LONG
- 111055 64-66 LONG
- 111057 67-72 LONG
- 111059 73-79 LONG

CORRECT NUMBER OF FASTENERS ARE INCLUDED FOR YOUR YEAR SERIES. Flareside is same as Stepside

DODGE

Short Stepside\$43.00 ea

- 111035 39-47 SHORT 78"
- 111037 48-52 SHORT 78"
- 111040 53-54 SHORT 76"
- 111042 55-60 SHORT 76"
- 111045 61-65 1st SHORT 76"
- 111047 65-2nd-85 SHORT 76"

Long Stepside\$49.50 ea

- 111036 39-47 LONG STEP 90"
- 111038 48-52 LONG STEP 90"
- 111041 53-54 LONG STEP 88"
- 111043 55-60 LONG STEP 88"
- 111046 61-65 1st LONG STEP 88"
- 111048 65-2nd-85 LONG STEP 94"

Power Wagon\$49.50 ea

- 111039 46-52 95 3/4"
- 111044 53-68 93 3/4"

CORRECT NUMBER OF FASTENERS ARE INCLUDED FOR YOUR YEAR SERIES.



Aluminum Bump Bed Strips with Fasteners

GM

- Short Stepside\$67.00 ea
- 111001B 30-33 SHORT CHEVY
- 111002B 34-36 SHORT CHEVY
- 111004B 37-39 SHORT CHEVY
- 111007B 40-46 SHORT CHEVY
- 111011B 47-53 SHORT
- 111016B 54-59 SHORT
- 111022B 60-66 SHORT
- 111028B 67-72 SHORT
- 111032B 73-87 SHORT

Long Stepside \$72.50 ea

- 111003B 35-36 LONG GMC
- 111006B 37-38 LONG GMC
- 111005B 37-39 LONG CHEVY
- 111008B 40-46 LONG CHEVY
- 111012B 47-53 LONG
- 111017B 54-55 1ST LONG
- 111018B 55-2nd-57 LONG 89"
- 111019B 57-59 LONG 97"
- 111024B 60-66 LONG
- 111030B 67-72 LONG
- 111033B 73-87 LONG

Short Fleetside Sets

- 111020B 58-59 SHORT\$736.00
- 111023B 60-66 SHORT602.50
- 111029B 67-72 SHORT602.50

Long Fleetside Sets

- 111021B 58-59 LONG \$797.50
- 111025B 60-66 LONG652.50
- 111031B 67-72 LONG652.50
- 111034B 73-80 LONG435.00

CORRECT NUMBER OF FASTENERS ARE INCLUDED FOR YOUR YEAR SERIES.





Aluminum Bump Bed Strips with Fasteners

FORD

Short Flareside.....\$67.00 ea
 111049B 51-52 SHORT FLARE
 111051B 53-60 SHORT FLARE
 111053B 61-64 SHORT FLARE
 111056B 65-72 SHORT FLARE
 111058B 76-87 SHORT FLARE

Long Flareside.....\$72.50 ea
 111052B 53-60 LONG FLARE
 111054B 61-63 LONG FLARE
 111055B 64-66 LONG FLARE
 111057B 67-72 LONG FLARE
 111059B 73-79 LONG FLARE

CORRECT NUMBER OF FASTENERS ARE INCLUDED FOR YOUR YEAR SERIES.
 Flareside is same as Stepside

DODGE

Short Stepside\$67.00 ea
 111035B 39-47 SHORT 78"
 111037B 48-52 SHORT 78"
 111040B 53-54 SHORT 76"
 111042B 55-60 SHORT 76"
 111045B 61-65 1st SHORT 76"
 111047B 65-2nd-85 SHORT 76"

Long Stepside\$72.50 ea
 111036B 39-47 LONG 90"
 111038B 48-52 LONG 90"
 111041B 53-54 LONG 88"
 111043B 55-60 LONG 88"
 111046B 61-65 1st LONG 88"
 111048B 65-2nd-85 LONG 94"

Power Wagon\$72.50 ea
 111039B 46-52 95 3/4"
 111044B 53-68 93 3/4"

CORRECT NUMBER OF FASTENERS ARE INCLUDED FOR YOUR YEAR SERIES.



Aluminum Flat Bed Strips with Fasteners

GM


Short Stepside\$61.50 ea
 111001F 30-33 SHORT CHEVY
 111002F 34-36 SHORT CHEVY
 111004F 37-39 SHORT CHEVY
 111007F 40-46 SHORT CHEVY
 111011F 47-53 SHORT
 111016F 54-59 SHORT
 111022F 60-66 SHORT
 111028F 67-72 SHORT
 111032F 73-87 SHORT

Long Stepside\$67.00 ea
 111003F 35-36 LONG GMC
 111006F 37-38 LONG GMC
 111005F 37-39 LONG CHEVY
 111008F 40-46 LONG CHEVY
 111012F 47-53 LONG
 111017F 54-55 1ST LONG
 111018F 55-2nd-57 LONG 89"
 111019F 57-59 LONG 97"
 111024F 60-66 LONG
 111030F 67-72 LONG
 111033F 73-87 LONG

Short Fleetside Sets
 111020F 58-59 SHORT\$675.00
 111023F 60-66 SHORT552.00
 111029F 67-72 SHORT552.00

Long Fleetside Sets
 111021F 58-59 LONG\$736.00
 111025F 60-66 LONG602.50
 111031F 67-72 LONG602.50
 111034F 73-80 LONG401.50

CORRECT NUMBER OF FASTENERS ARE INCLUDED FOR YOUR YEAR SERIES.

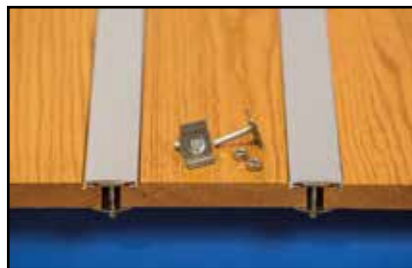

Aluminum Flat Bed Strips with Fasteners

FORD

Short Flareside.....\$61.50 ea
 111049F 51-52 SHORT FLARE
 111051F 53-60 SHORT FLARE
 111053F 61-64 SHORT FLARE
 111056F 65-72 SHORT FLARE
 111058F 76-87 SHORT FLARE

Long Flareside.....\$67.00 ea
 111052F 53-60 LONG FLARE
 111054F 61-63 LONG FLARE
 111055F 64-66 LONG FLARE
 111057F 67-72 LONG FLARE
 111059F 73-79 LONG FLARE

CORRECT NUMBER OF FASTENERS ARE INCLUDED FOR YOUR YEAR SERIES.
 Flareside is same as Stepside

DODGE

Short Stepside\$61.50 ea
 111035F 39-47 SHORT 78"
 111037F 48-52 SHORT 78"
 111040F 53-54 SHORT 76"
 111042F 55-60 SHORT 76"
 111045F 61-65 1st SHORT 76"
 111047F 65-2nd-85 SHORT 76"

Long Stepside\$67.00 ea
 111036F 39-47 LONG STEP 90"
 111038F 48-52 LONG STEP 90"
 111041F 53-54 LONG STEP 88"
 111043F 55-60 LONG STEP 88"
 111046F 61-65 1st LONG STEP 88"
 111048F 65-2nd-85 LONG STEP 94"

Power Wagon\$67.00 ea
 111039F 46-52 95 3/4"
 111044F 53-68 93 3/4"

CORRECT NUMBER OF FASTENERS ARE INCLUDED FOR YOUR YEAR SERIES.



BED BOLT KITS FOR BED-TO-FRAME AND SIDES, SEE PAGE 36.



"NO BOLTS"
BED BOLT KITS

THESE BOLT KITS ARE MADE TO USE WITH MAR-K'S™ BED WOOD WITH HIDDEN HOLES AND BED STRIPS WITH HIDDEN FASTENERS. SEE PAGES 29 OR 30 FOR INFORMATION ON HOW TO PREVENT GALLING ON STAINLESS FASTENERS.

**Bed-to-Frame/Sides
Polished**

GM

Short Stepside Kits

110786	34-36 CHEVY	\$65.00
111700	37-39 CHEVY	65.00
111703	40-46 CHEVY	67.00
111715	47-53	71.00
111732	54-55 1st	65.00
111738	55-2nd-59	65.00
111741	55-58 CAMEO/SUB	110.00
111757	60-66	65.00
111781	67-72	65.00
111793	73-87	95.00

Long Stepside Kits

111709	35-36 GMC	\$95.00
111712	37-38 GMC	72.00
111706	40-46 CHEVY	72.00
111718	47-53	83.00
111735	54-55 1st	67.00
111745	55 2nd-57 89"	67.00
111748	57-59 97"	74.00
111763	60-62	82.00
111775	63-66	67.00
111787	67-72	67.00
111796	73-87	99.00

Short Fleetside Kits

111751	58-59	\$77.00
111760	60-66	80.00
111784	67-72	82.00

Long Fleetside Kits

111754	58-59	\$90.00
111766	60-62	92.00
111778	63-66	84.00
111790	67-72	84.00
111799	73-80	102.00

FORD

Short Flaeside Kits

111802	51-52	\$83.00
111805	53-60	80.00
111811	61-72	83.00
111823	76-87	101.00

Long Flaeside Kits

111808	53-72	\$101.00
111826	73-79	101.00

(Flaeside is same as Stepside)

DODGE

Short Stepside Kits

111835	48-52 78" x 49"	\$74.00
111844	53-60 76" x 49"	74.00

Long Stepside Kits

111838	48-52 90"	\$77.00
111847	53-60 88" x 54"	83.00

Power Wagon Kits

111832	46-50 95 3/4" x 54"	\$77.00
111841	51-52 95 3/4" x 54"	77.00

**Bed-to-Frame/Sides
Unpolished**

GM

Short Stepside Kits

110787	34-36 CHEVY	\$53.00
111701	37-39 CHEVY	53.00
111704	40-46 CHEVY	55.00
111716	47-53	67.00
111733	54-55 1st	61.00
111739	55-2nd-59	53.00
111742	55-58 CAMEO/SUB	106.00
111758	60-66	53.00
111782	67-72	53.00
111794	73-87	83.00

Long Stepside Kits

111710	35-36 GMC	\$92.00
111713	37-38 GMC	60.00
111707	40-46 CHEVY	60.00
111719	47-53	79.00
111736	54-55 1st	55.00
111746	55 2nd-57 89"	62.00
111749	57-59 97"	62.00
111764	60-62	70.00
111776	63-66	55.00
111788	67-72	55.00
111797	73-87	86.00

Short Fleetside Kits

111752	58-59	\$65.00
111761	60-66	72.00
111785	67-72	73.00

Long Fleetside Kits

111755	58-59	\$77.00
111767	60-62	84.00
111779	63-66	76.00
111791	67-72	73.00
111800	73-80	90.00

FORD

Short Flaeside Kits

111803	51-52	\$71.00
111806	53-60	69.00
111812	61-72	71.00
111824	76-87	83.00

Long Flaeside Kits

111809	53-72	\$84.00
111827	73-79	83.00

(Flaeside is same as Stepside)

DODGE

Short Stepside Kits

111836	48-52 78" x 49"	\$64.00
111845	53-60 76" x 49"	64.00

Long Stepside Kits

111839	48-52 90"	\$65.00
111848	53-60 88" x 54"	70.00

Power Wagon Kits

111833	46-50 95 3/4" x 54"	\$71.00
111842	51-52 95 3/4" x 54"	65.00

**Bed-to-Frame/Sides
Zinc Plated**

GM

Short Stepside Kits

110788	34-36 CHEVY	\$34.00
111702	37-39 CHEVY	34.00
111705	40-46 CHEVY	34.00
111717	47-53	36.00
111734	54-55 1st	34.00
111740	55-2nd-59	34.00
111743	55-58 CAMEO/SUB	37.00
111759	60-66	34.00
111783	67-72	34.00
111795	73-87	46.00

Long Stepside Kits

111711	35-36 GMC	\$44.00
111714	37-38 GMC	40.00
111708	40-46 CHEVY	40.00
111720	47-53	43.00
111737	54-55 1st	36.00
111747	55 2nd-57 89"	37.00
111750	57-59 97"	40.00
111765	60-62	37.00
111777	63-66	34.00
111789	67-72	37.00
111798	73-87	48.00

Short Fleetside Kits

111753	58-59	\$36.00
111762	60-66	41.00
111786	67-72	41.00

Long Fleetside Kits

111756	58-59	\$41.00
111768	60-62	43.00
111780	63-66	40.00
111792	67-72	40.00
111801	73-80	57.00

FORD

Short Flaeside Kits

111804	51-52	\$57.00
111807	53-60	55.00
111813	61-72	57.00
111825	76-87	64.00

Long Flaeside Kits

111810	53-72	\$64.00
111828	73-79	64.00

(Flaeside is same as Stepside)

DODGE

Short Stepside Kits

111837	48-52 78" x 49"	\$34.00
111846	53-60 76" x 49"	36.00

Long Stepside Kits

111840	48-52 90"	\$34.00
111849	53-60 88" x 54"	34.00

Power Wagon Kits

111834	46-50 95 3/4" x 54"	\$36.00
111843	51-52 95 3/4" x 54"	34.00